

# TB 2001 - Torque Box Wiring Instructions




## 120/240 VAC Dual Voltage Coil Connection Instructions


Note: All connections must be done securely with appropriate wire nuts or connectors. No exposed leads should be visible

### Dual Voltage - 120 VAC

- HOT (LIVE)** - Usually the black wire, connect to **BOTH** RED and BROWN leads from motor.
- GROUND** - Usually green or bare copper, connect to GREEN lead from motor.
- NEUTRAL** - Usually the white wire, connect to **BOTH** BLACK and WHITE leads from motor.

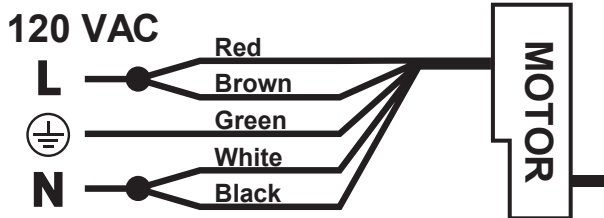


### Dual Voltage - 120 VAC

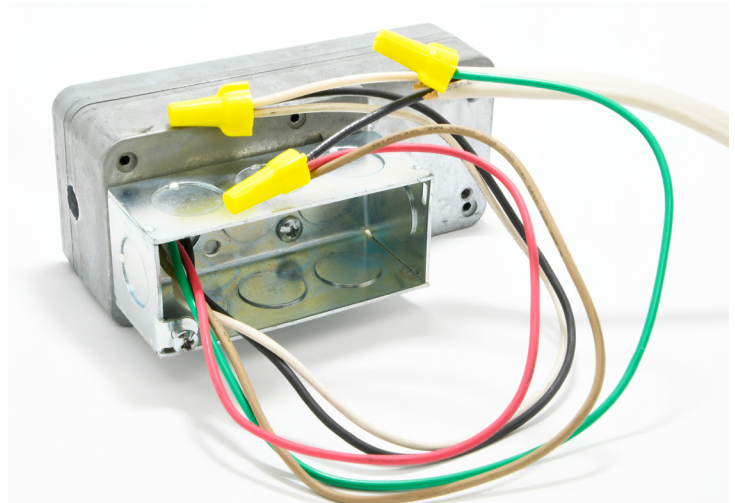

### Dual Voltage - 240 VAC

- HOT (LIVE)** - Usually the black wire, connect to **ONLY** the RED lead from motor.
- GROUND** - Usually green or bare copper, connect to GREEN lead from motor.
- NEUTRAL** - Usually the white wire, connect to **ONLY** the WHITE lead from motor.
- OTHER** - Connect **BOTH** BLACK and BROWN leads from the motor together.

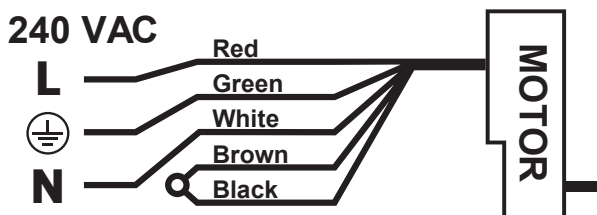

### Dual Voltage - 240 VAC

